 
 


CHASE RIDER FEATURE

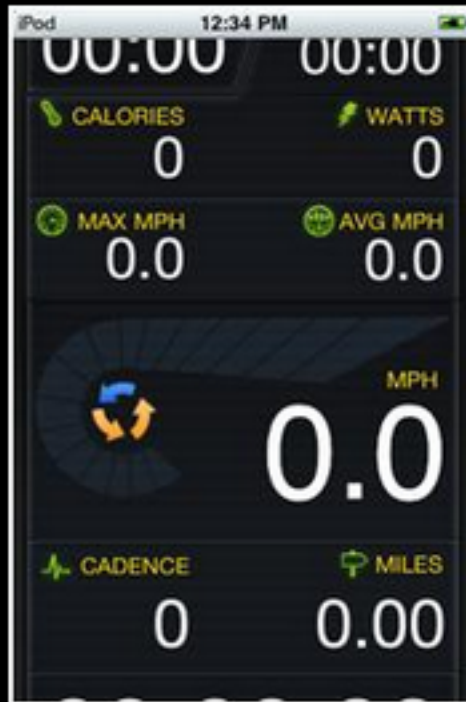

 
From the main ride screen, swipe top to bottom to access the chase bike rider feature.

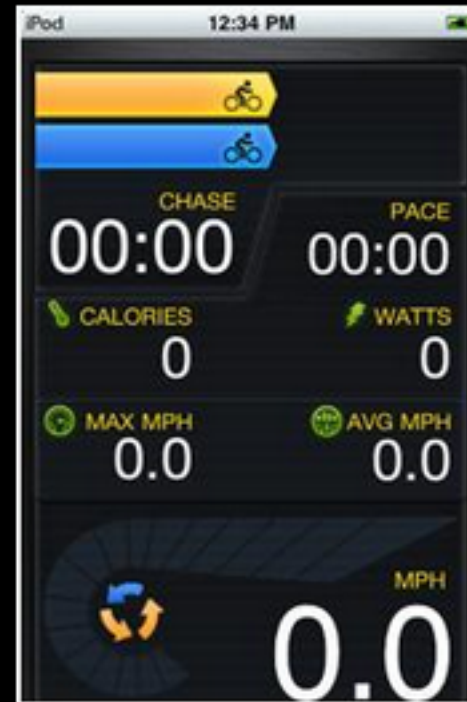

Chase rider screen: Select the yellow and blue chase rider icon in the top left corner of the chase cycling rider screen.



Your saved rides will appear. Choose the saved session that you would like to compare the current session to.

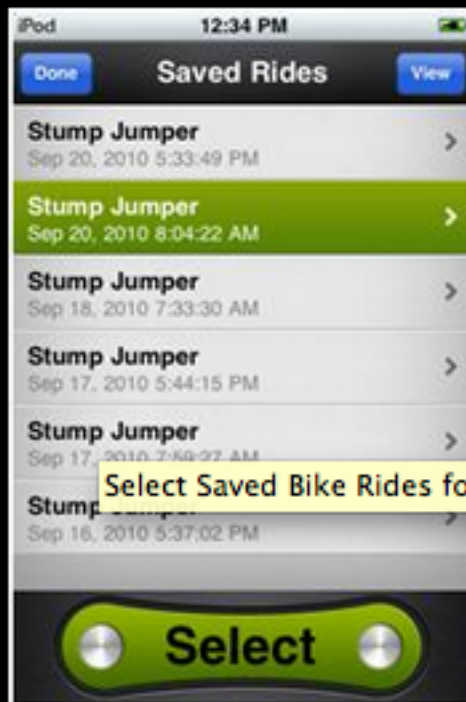

Select Saved Bike Rides for Liverider Cycling Computer

Press "Select" to choose your session as the chase rider and return to the chase bike rider screen on liverider.



Start riding. As pictured here, the yellow rider will show how far your current session speed is ahead or behind your previous time. The "Chase" number also provides that information. Tap the chase rider icon again to select the "No Chase Rider" option and end your chase rider session. Swipe from the bottom to the top of the screen to return to the main ride screen.